



Handguard Instructions

1. Scenario 1 - Replace the original dust cover of your firearm with our Handguard.

- First, remove original dust cover handguard, front sight tower, and barrel nut from your firearm.
- Then simply go to step 3 to install your Handguard.
- Use included barrel nut of new Handguard.




2. Scenario 2 - Build your own AR firearm from scratch with our Handguard.

- You might have purchased different set of barrel nut, but
- Please use included barrel nut of our handguard for optimal adaption.
- Build your barrel and upper receiver.
- Skip step 1.a, go straight to step 3 to install your Handguard.




3. Gently slip on new barrel nut (provided with mount) and screw onto barrel. Tighten securely. See photos "A & B".

4. Slide Handguard over barrel, onto barrel nut. See photo "C". Carefully push mount on until mount meets rifle upper barrel, leaving no gaps between mount and upper barrel. See photo "D".

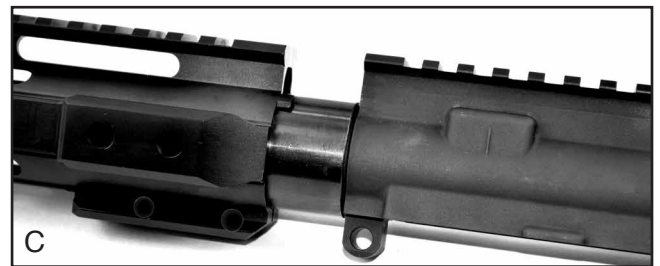


5. Using the two screws provided, securely tighten the bottom (underside) screws, to hold mount firmly into place. See photo "E". **Important Note: Do not install or tighten the 4 side screws until you have completed this step.**


6. Once the 2 bottom (underside) screws are tightened and mount is securely attached, insert each of the 4 side screws. 2 on left side and 2 on right side. Take turns in tightening each side screw gently. See photo "F". **Important Note: Stop tightening as soon as you meet resistance. Over tightening could result in misalignment of mount to barrel and could strip the threading on the screws.**

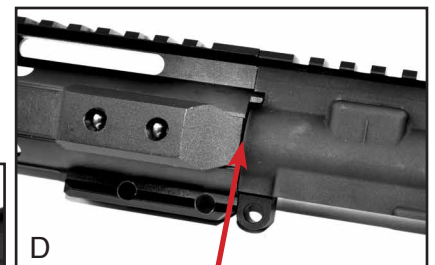

Slide mount on barrel nut until there is no gap showing between mount and barrel.

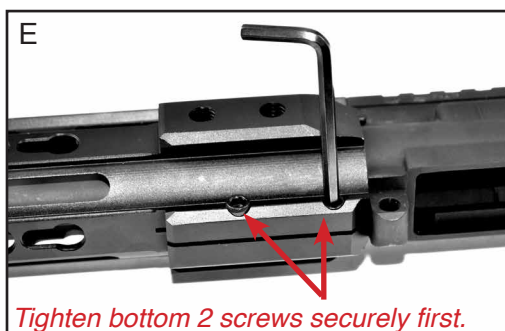

Tighten bottom 2 screws securely first.

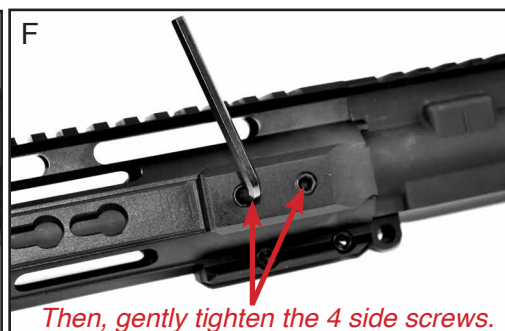

Then, gently tighten the 4 side screws.